


easee

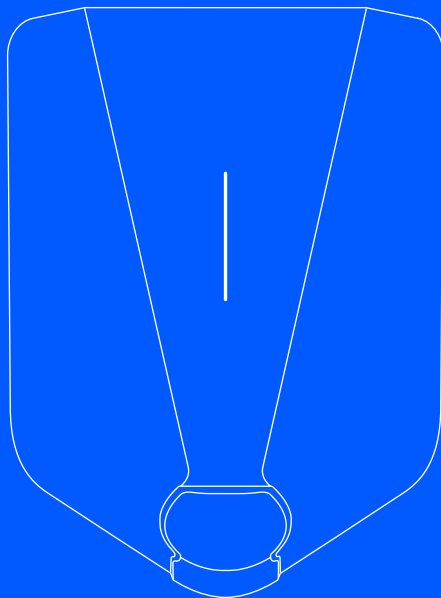

EN User guide

# Charge Lite

# How do I charge?

Read the Important product information guide in the product packaging or at [easee.com/manuals](https://easee.com/manuals) before using the product.

**Operation of the product using the app features requires a mobile device with Bluetooth support.**

Make sure that the following requirements are met before using the Charging Robot:

- The product and its electrical connection has been installed by an authorised electrician according to the Installer guide.
  - The charger is properly configured.
  - The software is up to date (see the [Charging Robot interface](#)).
  - If you have set up access control, unlock it by using a registered RFID tag (see the [Features](#)) or disable it from the Easee App or the local interface.
1. Check the charging cable and connector for damage and impurities such as foreign objects and water ingress before charging.
  2. Connect the charging cable to the Charging Robot and your electric car. The charging process starts and adapts automatically to the electric car and the available energy at any time according to the configuration.

If the car does not start charging, check that charging is activated in your car and that the connectors are properly plugged in. If charging still does not start, check what might be the cause on the [Charging Robot interface](#) section.

## Smart charging

Some operators offer smart charging which will delay charging to a suitable point in time, often tied to electricity price or similar mechanisms. When Smart charging is active the LED strip is lit blue, charging will not start until the operators criteria for charging is met. Contact your operator to know more and to find out if they offer this service.

## Data Protection

Upon Installation and connection to the internet, as an IoT device Easee Charging Robots automatically share data with the Easee cloud (owned by Easee ASA). This makes sure that Easee monitors the charger safety, security, and stability during its lifetime. As a result, some personal data, such as usage patterns, site configurations, and device identifiers, will be processed to provide the smart functionalities of the charger. By using our Chargers, you agree to the collection and processing of some personal data in line with our privacy policy and any applicable data protection laws. If data transfer to the Easee cloud is not desired, we advise users to stop using Easee chargers immediately. For more information, please see Easee Privacy Policy (<https://easee.com/en/privacy/>), available in our website.

## NOTES

- Type designation: Easee AC Charger Platform CB-A3-2.
- The operating temperature of the charger is -30 °C to +40 °C.
- Do not use extension cords or adapters in combination with the product.

# Apps and interfaces

## Easee App

The Easee App gives full control and status over your charger. It's intended for everyday use of your Easee products, through the Easee Cloud.

To download the app, scan the QR code or go to:

[easee.com/app](https://easee.com/app)



## Local interface

The local interface is intended for local operations of the charger when no internet is available.

Read more about the local interface at:


[easee.com/support/localinterface](https://easee.com/support/localinterface)

## Easee Portal

The Easee Portal is a tool intended for administration of one or several Easee sites. The Portal is mainly intended for site owners, installers, administrators, service providers and people who need to manage several products and sites from one interface.

Go to [easee.com/support](https://easee.com/support) for more information on our interfaces.

# Features

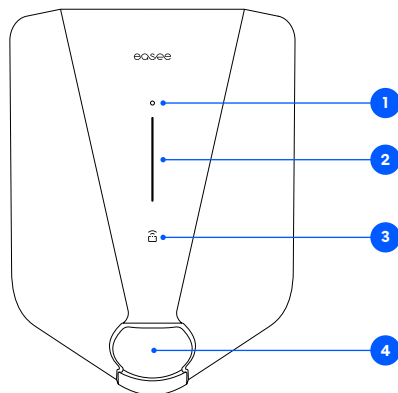

1. **Touch button:** The touch button is used to activate the local interface. The local interface is intended for local operations of the charger when no internet is available. Read more about the local interface at: [easee.com/support/localinterface](https://easee.com/support/localinterface)
2. **Light strip:** The light strip communicates the status of the Charging Robot at all times. (See [Charging Robot interface](#)).
3. **RFID area:** The integrated RFID reader enables access control of the Charging Robot and identification of different users. You can use it to unlock the charger with an Easee Key. Check our knowledge base at [easee.com/support](https://easee.com/support) for more details on how to add and manage your Easee Keys.
4. **Type 2 socket:** The Type 2 socket is completely universal and allows you to charge any type of electric vehicle using the appropriate charging cable. Furthermore, it is possible to permanently lock the charging cable, so you do not have to worry about it being stolen.

**NOTE:** Adaptors should not be used on the charger or the charging cable. The charging cable must have appropriate sockets on each end.

# Charging Robot interface

| Light description                                                                                                                   | Status                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|-------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| White - constant light, only at the bottom 2 LEDs - master unit / 1 LED - secondary units                                           | Standby                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| White - constant light                                                                                                              | Car connected                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| White - pulsating light                                                                                                             | Charging in progress                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Blue - constant light                                                                                                               | Smart charging enabled (car connected)                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Blue - pulsating light                                                                                                              | Smart charging in progress                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| At startup, the LEDs turn on one by one. When the charger is updating, one or more LEDs will flash green while this is in progress. | Updating software (updating can take up to 30 minutes)<br><b>NOTE!</b> The car must be disconnected before a software update can be completed.                                                                                                                                                                                                                                                                                                                             |
| White - flashing light                                                                                                              | Waiting for authentication by an RFID tag. Hold the RFID tag against the RFID area of the Charging Robot in order to authenticate and initiate the charging.                                                                                                                                                                                                                                                                                                               |
| White - fast flashing light                                                                                                         | RFID-tag received (awaiting key verification)                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Red - flashing light, with warning sounds                                                                                           |  <b>WARNING</b><br>Critical error! Turn off the power and remove the charging cable from the Charging Robot. The power can then be turned back on if necessary. The flashing red light will continue, but the warning sound will stop when the charging cable is disconnected. The charger is blocked from further use, cannot be reset and has to be replaced. Contact customer support. |
| Red - flashing light                                                                                                                |  <b>WARNING</b><br>Critical error! The charger is blocked from further use, cannot be reset and has to be replaced. Contact customer support.                                                                                                                                                                                                                                             |
| Red - constant light                                                                                                                | General error. Unplug the charging cable and replug it to the Charging Robot. If the red light persists, check the Easee App or our knowledge base <sup>1</sup> for further information.                                                                                                                                                                                                                                                                                   |

<sup>1</sup> Easee public knowledge base can be found at [easee.com/support](https://easee.com/support).

| Light description                           | Status                                                                                                                                                      |
|---------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Red - constant light, with warning sounds   | Wires are connected incorrectly. Consult an authorised electrician.                                                                                         |
| Red - pulsating light                       | The Charging Robot has measured an abnormal temperature and has entered in safe mode. Please go to our knowledge base <sup>1</sup> for further information. |
| Yellow - flashing light, only at the bottom | The Charging Robot is waiting to be configured. Consult an authorised electrician.                                                                          |

---

<sup>1</sup> Easee public knowledge base can be found at [easesupport.com](https://easesupport.com).

# Maintenance

## General maintenance

- Ensure that the charger and charging cable do not have any signs of mechanical damage.
- Visually inspect the Type 2 socket for wear and tear at regular intervals according to local regulations. If the pins are discoloured or damaged, please contact your authorised electrician.
- If the charging cable is damaged, replace the charging cable.
- The locking mechanism should not be touched.
- Do not store the charging cable on or near the ground.

## Cleaning

The product does not require cleaning to operate properly. Nevertheless, if the product needs to be cleaned for cosmetic reasons, this is possible.

- Use a damp cloth and an all-purpose household cleaner. Avoid using strong chemicals that contain oil or alcohol, as this will discolour the plastic.
- Do not use running water or high pressure water jets.

## Serviceable parts

These are the components of the Charge Lite charger that can be exchanged:

- Chargeberry (as a complete unit)\*
- Front cover socket cap
- Front cover

\*No parts or components inside of the Chargeberry are exchangeable. The Chargeberry is exchangeable only as a complete unit.

## Manufacturing Date and Serial Number

The Chargeberry's month and year of manufacture and serial number are on the sticker on the Type-2 socket

underneath the charger cover. The production date is displayed in MM/YY format, directly above the serial number, unique to each Chargeberry unit.

The manufacturing date can be found in DD/MM/YY format in the user app. Go to Charger settings, then About, then Manufactured.

## PIN and Serial Number

The PIN and Serial Number sticker is removed by the installer and placed in the fuse cabinet. The Bluetooth connection to the charger uses the serial number as a name.

## Repair

If your charger needs to be repaired, please contact your Easee supplier. Do not open or otherwise disassemble the Chargeberry.

## Returns and complaints

Contact your distributor or Easee Customer Support regarding the return and complaint of your product.

## Customer support

Download the latest manuals, find answers to frequently asked questions and useful documents and videos for your product at [easee.com/support](https://easee.com/support).

# Practical details

## Warranty

The device is free from material defects and is in accordance with laws and regulations for consumer protection in the country where the product is purchased. All correctly installed Easee hardware is covered by our 3 years\* limited warranty. If your charger needs to be repaired within this warranty period, please contact your Easee supplier. Further information can be found at [easee.com/support](https://easee.com/support).

\*Some countries may have extended warranty.

## For Austria, Finland, Germany, Netherlands, Switzerland:

Charge Lite is a home-charging device manufactured and designed strictly for residential use only. Charge Lite chargers shall not be used for non-residential use. Residential use is to be understood as use in or around an individual's own residence. The Charge Lite charger at all times must make use of an individual's private connection to the electricity grid. Charge Lite chargers cannot be used for charging electric vehicles for which reimbursement is desired, based on the realized consumption of electricity. The Charge Lite charger cannot be used to calculate this consumption.

## For Belgium, Croatia, Czech Republic, Denmark, Estonia, France, Greece, Hungary, Iceland, Ireland, Italy, Latvia, Lithuania, Luxembourg, Norway, Poland, Portugal, Romania, Slovakia, Slovenia, Spain, Sweden, UK:

Charge Lite is not MID compliant. In some markets, MID compliance is not a requirement yet for charging electric vehicles for which reimbursement is expected or consumption is reported as a cost in tax filings; please check local rules for more information.

## Contact details

Easee ASA  
Vassbotnen 23  
4033 Stavanger, Norway  
Org. nr: 920 292 046

You can find additional contact details for your country at [easee.com](https://easee.com).

The information in this document is for information purposes only, is provided as is, and may be subject to change without notice. Easee ASA, including its subsidiaries, does not accept any liability for the correctness or completeness of the information and illustrations, and is not liable or responsible for your considerations, assessments, decisions or absence of such, or other use of the information in this document.

No part of this publication may be re-published, reproduced, transmitted or re-used in any other form, by any means or in any form, for your own or any third-party's use, unless otherwise agreed with Easee or its subsidiaries in writing. Any permitted use shall always be done in accordance with good practice and ensure that no harm may be caused to Easee or by misleading the consumer.

Easee and Easee products, product names, trademarks and slogans, whether registered or not, are Easee's intellectual property and may not be used without Easee's prior written permission. All other products and services mentioned may be trademarks or service marks of their respective owners.

October 2024 – Version 1.06  
© 2024 by Easee ASA. All rights reserved.



Easee ASA  
Vassbotnen 23  
4033 Stavanger, Norway  
[www.easee.com](http://www.easee.com)